

EZ LOCK

Bluetooth Module

Connect the red (+) and black (-) wires to the vehicle's power source. Connect the ECU-8-ECM control module to the Bluetooth module (ECM/IN). Connect the Bluetooth module to the touch-pad (KPAD/OUT). When the vehicle's ignition is turned on, a light will flash on the Bluetooth module indicating it is ready to pair with the EZ Lock app.

Download the EZ Lock interface and monitoring app at www.ezlock.net under the *electronics* header on the main page.

With the vehicle's ignition on, pair the intended device with the EZ Lock app. Enter the security code 123456 to complete pairing. The docking base can now be controlled and monitored with the paired device.

